


Installation of Quadro roofing panels

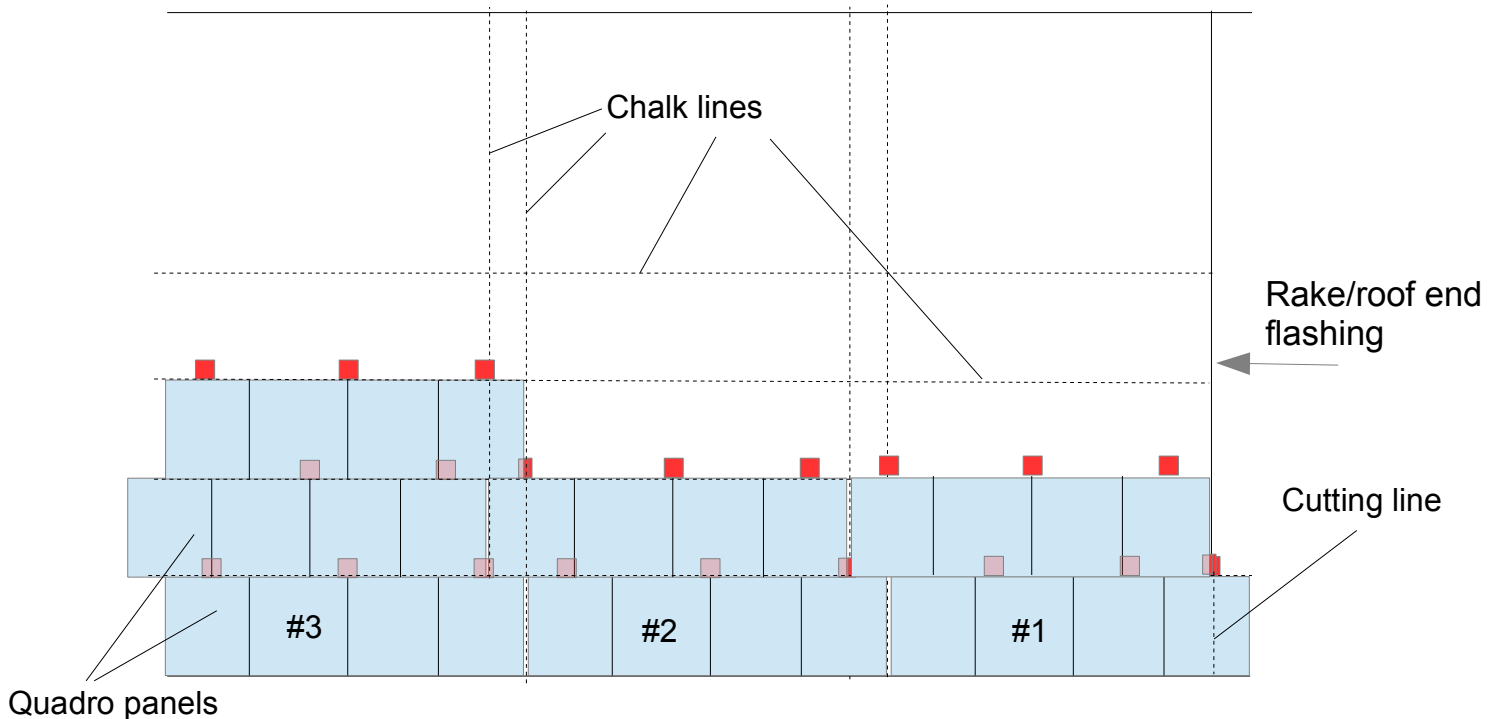

- Install the drip edge metal first then the rake/roof end flashing, valleys and other flashing.
- Chalk lines as indicated above. One orientation chalk line should be horizontal, +/- 1 - 2 degrees if the drip edge is not completely in level. The other chalk lines should be perpendicular to the horizontal lines in the given distances.
- Firmly hold the #1 panel in place after aligning it with two corresponding lines and fasten it using 3 (three) of the accessory **clips** using minimum of 2 (two) **fasteners** - screws or nails-per clip.
- **Florida, Alaska and other high wind areas require using 4 clips and 8 screws per panel.**
- The next panel (#2) can be easily connected to the left side of panel (#1) by holding the #2 panel's left side slightly down in an angle, pushing the lower right tip one inch into the #1's lower left receiver-seam and carefully move the left side of #2 upwards interlocking the #2 with the panel underneath or with the drip edge when it is the first row.



Walking on the roofing material does not affect the lifetime of the material, but it might affect the surface appearance. Please keep your shoes dirt and dust free when walking on the roof and do not let them slide on the roofing materials' surface to avoid scratches.

If the roof slope is higher than 5/12 please use roof jacks to be safe.



SPENGLER INDUSTRIES

5066 West Amelia Earhart Drive - Salt Lake City, UT 84116 - 801 - 462 - 5264

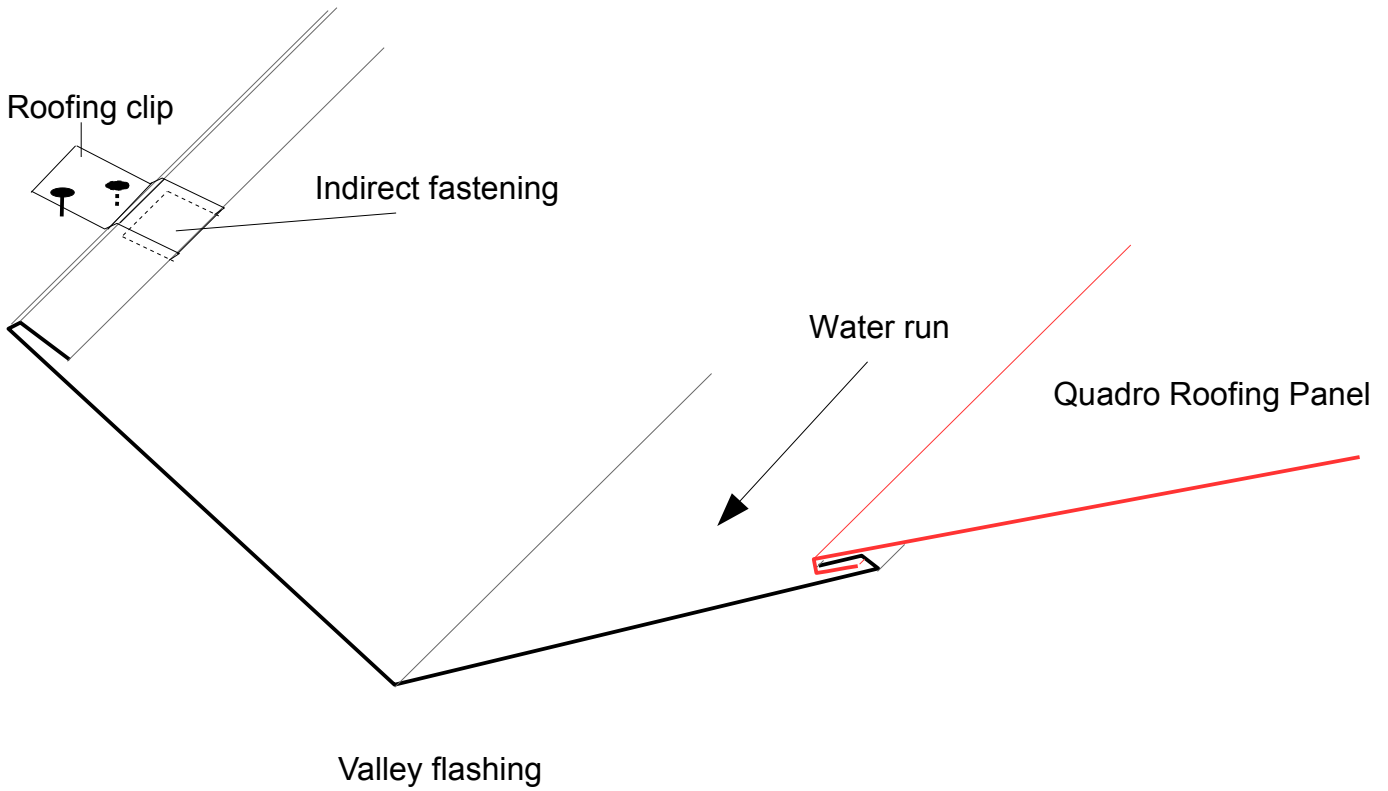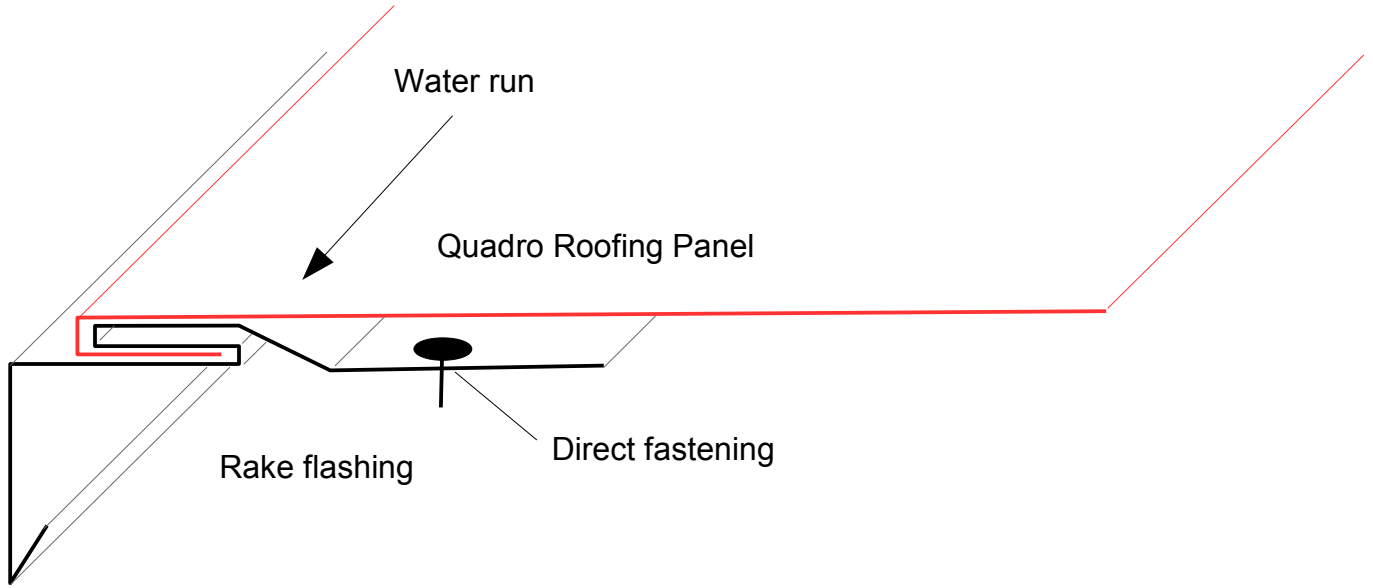



SPENGLER INDUSTRIES

5066 West Amelia Earhart Drive - Salt Lake City, UT 84116 - 801 - 462 - 5264

