





Plumeria Panels as Wall Cladding Installation Instructions

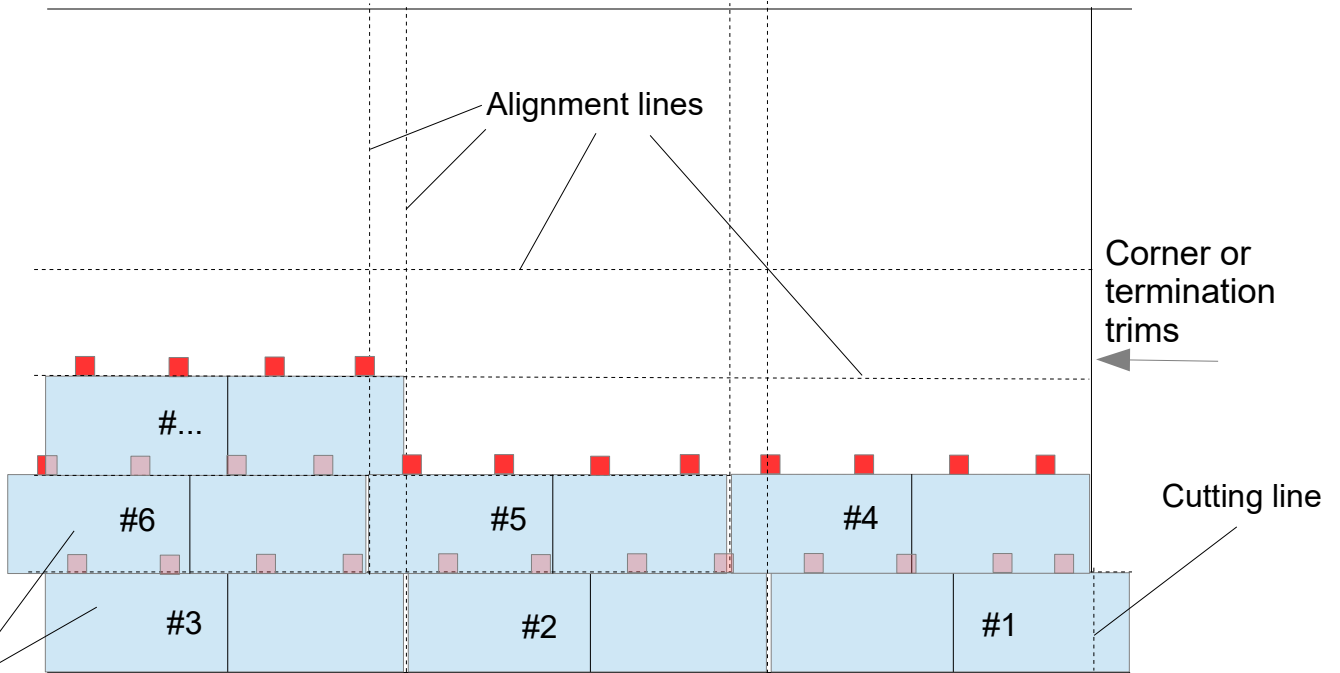


Plumeria panels


- Install the perimeter trims first. End-J-channels, corner-J-Channels or window-J-Channels etc.
- Place vertical and horizontal alignment lines as indicated above, perpendicular to each other.
- Firmly insert the #1 panel into the J-channel below and hold in place after aligning it with two corresponding lines and fasten it using 4 (four) of the accessory **clips** using minimum of 2 (two) **fasteners** - screws or nails- per clip.
- Florida, Alaska and other high wind areas require using more than 4 clips and 8 fasteners per Panel. Which will be specified accordingly.
- The next panel (#2) can be easily connected to the left side of panel (#1) by holding the #2 panel's left side slightly up in an angle, pushing its upper right tip one inch into the #1's upper left receiver-seam and carefully move the left side of #2 downwards interlocking the #2 with the #1 vertical seam and inserting it into the trim below at the same time.
- Repeat #3 like #2 for the entire row.
- Carefully, without scratching adjacent cladding products, interlock #4 with #1 and with #2 and pull it upwards until it clearly interlocks with the panels below and fasten it as instructed.

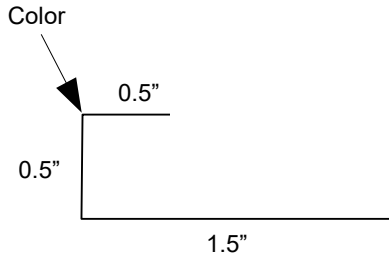


Corner trim
J-Channel dimension

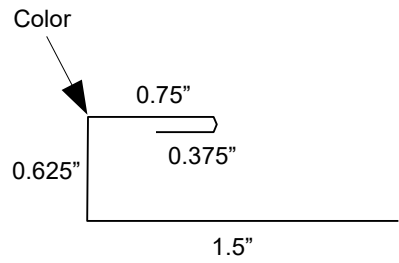


J-Channel dimension

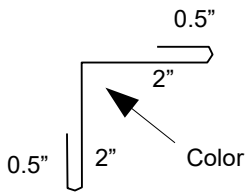


Inside corner dimension
(Using J-channels)

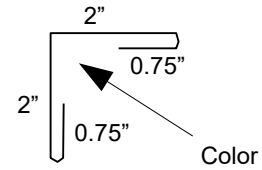

Seamed Inside corner
dimension

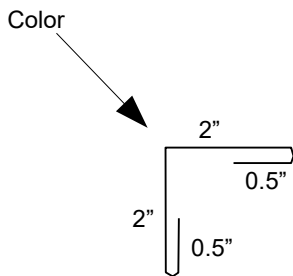

Outside corner dimension
(Using J-channels)

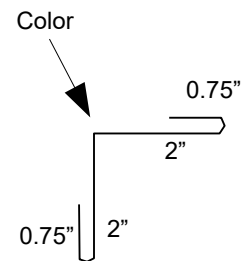

Seamed Outside corner
dimension